 



Remove the peak, side cover, and visor.



2. Focus side veneer's below wedges on the holes of lock button and then insert.



 
3.Take side veneer's back wedge to plug in the holes of section plate.



4.Push the lock button forward to lock the side veneer, then finish.

For another side, to follow the same steps.

 
Side veneer disassembling description



1. Push the lock button backward, to release lock function. 2.Use finger to hook up the top of side veneer, and then pull out the side


*For another side, to follow the same steps.

 Wind deflector disassembling description



Use one hand to grab the chin bar, using another hand to pull out wind deflector, then

 
Wind deflector assembling description




Take wind deflector and focus on the Chin bar's middle of bottom, take buttons from middle to side to fix on the holes of Chin bar.

Chin bar disassembling description

Open the visor, both hands holding chin bar both sides, using the thumb to push down the button of hook, pushing upward; then can separate chin bar from the helmet.

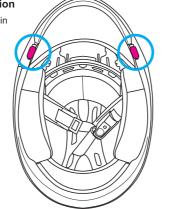

Chin bar assembling description Open the visor, taking chin bar both

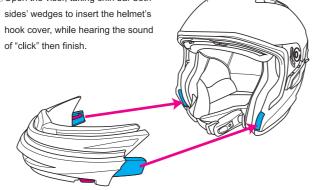

Combining pattern: 8 in 1




Open face: Sun visor + side veneer



Double visors + Peak Sun visor + Peak




double visors

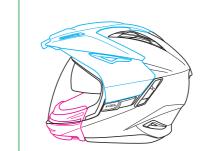

Double visors + chin bar


double visors + Peak+ Chin bar



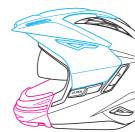



Full face without visor: Sun visor + chin bar+ side veneer

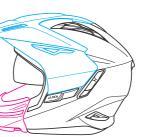

Sun visor + Peak+ chin bar



Version: 1.0

1. PEAK

2. PEAK EXTENDING PLATE 3. PEAK BASE PLATE

4. SUN VISOR 5. VISOR

6. CHIN BAR

7. CHIN BAR HOOK BUTTON

13. SUN VISOR LEVER 14. PEAK LOCK BUTTON

9. TOP VENT

10. SIDE TOP VENTS 11. OUTER SHELL

12. REAR VENT

15. LOWER REAR VENTS

 
8. QUICK RELEASE BUCKLE

Peak disassembling description





.Pull visor to half-open, open the peak lock utton to unlock, using one hand to hold the helmet, using another hand to pull upward,

For another side, to follow the same steps.




then can take out the peak's side.

 

 

Peak assembling description

 


1.Take the peak's top wedge plug into the hole




2.Move back the lock button, pull visor to top-open, using one hand to hold the helmet, another hand grab peak's edge, then using thumb to push down the wedge, focus the Lock button's hole to insert; then push lock button forward to lock the visor.

For another side, to follow the same steps.

 
○ The front of Peak can be pulled to longer or pushed to shorter.



OAfter disassembling Peak, pull out both side bases, then put them together, can save one third space.

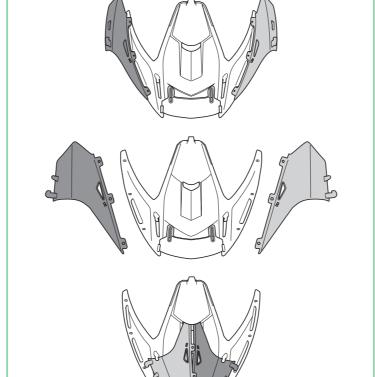

 
Peak's base plate disassembling description



Using one hand holding the peak, another hand to hold the peak's base plate; then take out from the front.

For another side, to follow the same steps.

 Peak's base plate assembling description



Divide the peak base plate to left and right side, after combining, from middle to start pressing wedges to fix.

 
For another side, to follow the same steps.

Visor disassembling description




Take out the peak, using coin to turn the side covers of both sides; then take out the circle plate and visor.

Visor assembling description



 
1.Take the visor's left and right side wedge and oush into the fillister of section plate.




2. Take the circle plate to focus on the fillister to put down, and then put the side cover and turn to close tightly. Now the visor can be closed.

For another side, to follow the same steps.

  Sun visor disassembling description







1. Open visor to its full open position. Push upward the sun visor pull rod and sun visor will be automatically laid down.

2.Pull downwards the left hand side of the sun visor in order to have a small vacant space. Then pull outward the sun visor to remove from mechanism on both sides.

  Sun visor assembling description







2. Press the sun visor pull rod to retrieve the sun visor into the shell and subsequently, the visor can be closed again!





