

INSTRUCTION



Thank you for purchasing the KOSO Knight LED Bar End . Before installing, please read the instruction carefully and keep it for future reference.

### ▲ ATTENTION!


- For installation, please follow the steps described in manual. Any damage caused by wrong installation shall be imputed to the users.
- Don't break or modify the wire. To avoid the short circuit, please don't pull the wire when installing.
- Do not disassemble or change any parts excluding the manual description.
- The interior examination or maintenance should be executed by our professionals.

### **MARK MEANING:**

NOTE You could get the installation details from the information behind the mark

- Some processes must be followed to avoid the affection caused by wrong installation.
   Some processes must be followed to avoid damages to yourself or the public.
- CAUTION! Some processes must be followed to avoid the damage to the vehicle.
- READ CAREFULLY | If any information dealt with in the manual remains unclear seek professional assistance.


#### 1-1 Accessories

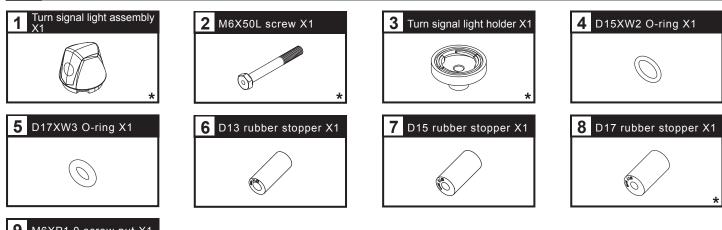



**NOTE** \* Indicates that part has been mounted onto the assembly.

NOTE Please contact your local distributor if the items received are not the same as the one listed above.

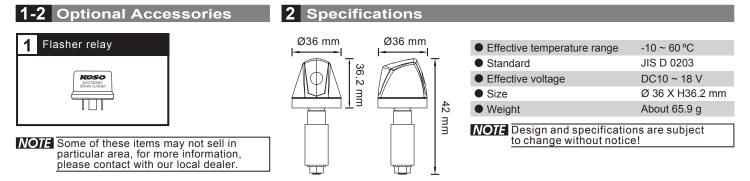


# **3-1** Installation instruction

- 1	Installation ste	ps		
	1.M6X50L screw ( 2.Turn signal light 3.O-ring(Accessor A.Rubber Stopper A.Rubber stopper NOTE Please refe according 5.M6XP1.0 screw	holder (Access ry 4~5) to the table bel to the inner diame (Accessory 6~8 er to the table bel to the inner diame	ow to select the co eter of handlebar. ) ow to select the co eter of handlebar.	
	Inner diameter of handlebar	13mm	15mm	17mm
	O-ring	×	D15XW2 (Accessory 4)	D17XW3 (Accessory 5)
$\sim$ $\sim$	Rubber stopper	D13 (Accessory 6)	D15 (Accessory 7)	D17 (Accessory 8)

## **Please proceed as follows**

Total length of wiring is 800 mm. Please pay attention to the distance between the wire exit hole and the end of handlebar to avoid the occurrence of insufficient wire length.

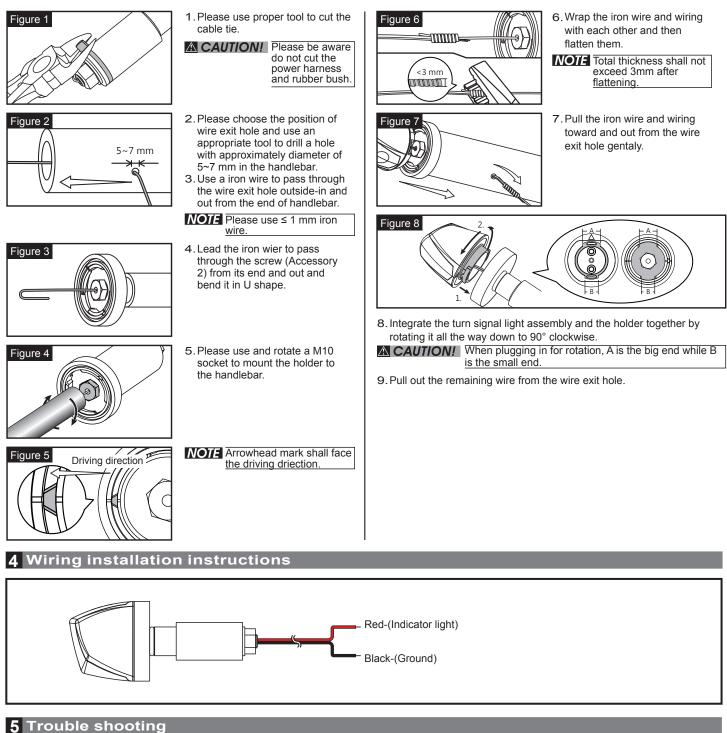

The following situation do not indicate malfunction of the meter. Pleasecheck the following before taking it in for repair.

Trouble	Check item
Turn signal light does not glow when activate.	<ul> <li>●Power supply cable disconnected.</li> <li>→Please check if power supply cable is broken or disconnected.</li> <li>→Please check if positive and negative poles are properly connected.</li> </ul>

% If still can't solve the problems according to the step above, please contact with distributors or us.