



2-1 Wiring installation instructions

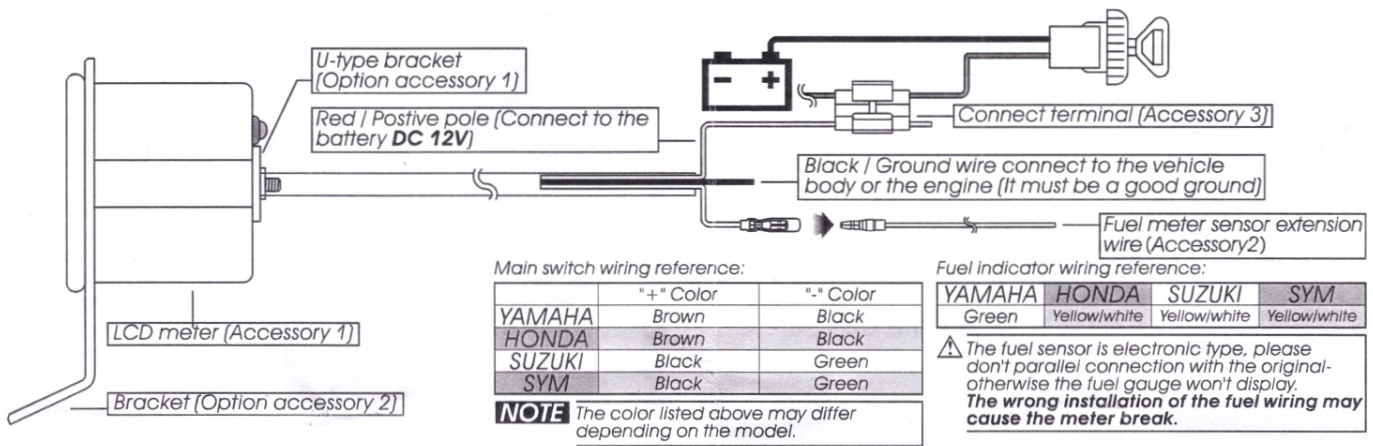

2-2 Installation instructions

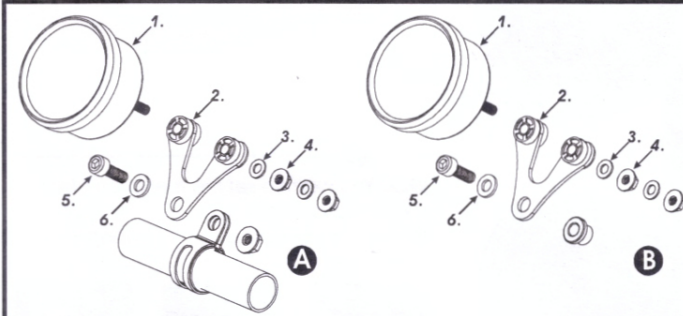


When installing, please follow the process.

1. LCD meter (Accessory 1)
2. Meter bracket (Accessory 4)
3. M4 washer X2 (Accessory 10)
4. M4 X P0.7 nut X2 (Accessory 8)
5. M6 X 18L screw (Accessory 7)
6. M6 washer (Accessory 11)

- A Use the meter bracket (Accessory 4), handle bar clamp (Accessory 5), rubber (Accessory 6) and the nut to install the meter on the handle bar.
- B Use the aluminum bush (Accessory 12) to install the meter on the handle bar stem.

3-1 Display instruction

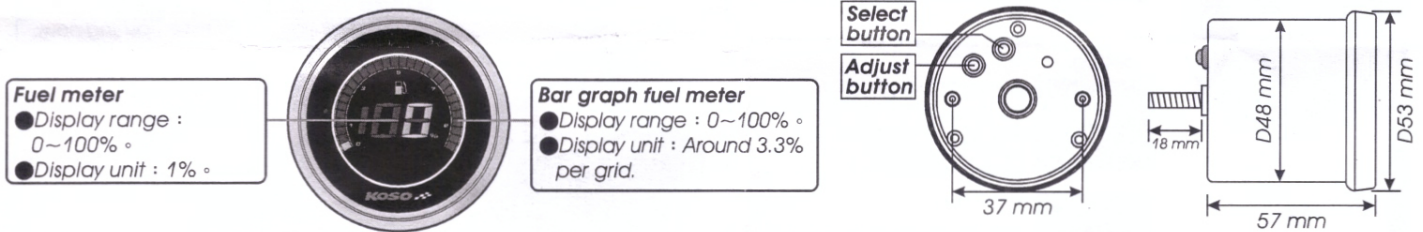

3-2 Function, setting instruction

- **Fuel meter** Display range : 0~100% °
Display unit : 1%
- **Bar graph fuel meter** Display range : 0~100% °
Display unit : Around 3.3% per grid.
- **Fuel level warning** Setting range : 10~25% °
Setting unit : 1%
- **Fuel resistance** Setting range : 10 (100 Ω) 、 51 (510 Ω) 、
US (Customize)

- **Effective voltage** DC12V
- **Effective temperature range** -10~+60°C
- **Meter standard** JIS D 0203 S2
- **Meter size** D48 X 52.8 mm
- **Meter weight** Around 117 g

NOTE Design and specification are subject to change without notice!