

Thank you for purchasing KOSO's RXF meter. Before operating this unit, please read the instructions thoroughly and retain them for future reference.

▲ Notice

- DC 12V applications only.
- Any damages caused by faulty installation shall be imputed to the users.
- To avoid short circuit from occurring, do not damage or modify the wire terminal during installation.
- Maintenance and repairs should be executed by our professionals only.
- Disassembly of the unit will void any warranty.

SYMBOL MEANING:

- NOTE**
▲ Some procedures must be followed to avoid damages caused by faulty installation.
- ▲ WARNING!** Some procedures must be followed in order to avoid damages from occurring to yourself or to others.
- ▲ CAUTION!** Some procedures must be followed in order to avoid damage from occurring to the vehicle.

1-1 Accessories

- | | | | |
|------------------------------|--|---|--------------------------------------|
| 1 Meter X 1 | 2 Main wiring X 1 | 3 RPM wire (Type A) X 1 | 4 RPM wire (Type B) X 1 |
| 5 Temp sensor wire X3 | 6 TH-01 water temp sensor X 2 | 7 Air temp sensor X 1 | 8 Speed sensor X1 |
| 9 D6 X 5L mm X6 | 10 M8 / S type speed sensor bracket X 1 | 11 M10 / S type speed sensor bracket X 1 | 12 M5 X 5L hexagonal bolt X 2 |
| 13 2.5 mm spanner X 1 | 14 Meter bracket X 1 | 15 Rubber Grommet X3 | 16 M5 gasket X 3 |
| 17 M4 X 10L screw X 2 | 18 3 mm spanner X 1 | 19 Mid-way connector X 10 | 20 M6 X 35L Screw X 2 |
| 21 M8 X 30L Screw X 2 | 22 M6 Screw X 2 | 23 M8 Screw X 2 | 24 M6 Gasket X 2 |
| 25 M8 Gasket X 2 | | | |

NOTE Please contact your local distributor if the items you received are not the same as the items listed above.

1-2 Optional accessories

- 1** Active Speed Sensor
- 2** Magnetic Bolt
- 3** L type speed sensor bracket
- 4** Oil temp sensor adapter
- 5** Water temp sensor adapter
- 6** Temp sensor
- 7** Temp sensor wire set (2 M)

2-1 Wiring installation instructions

