
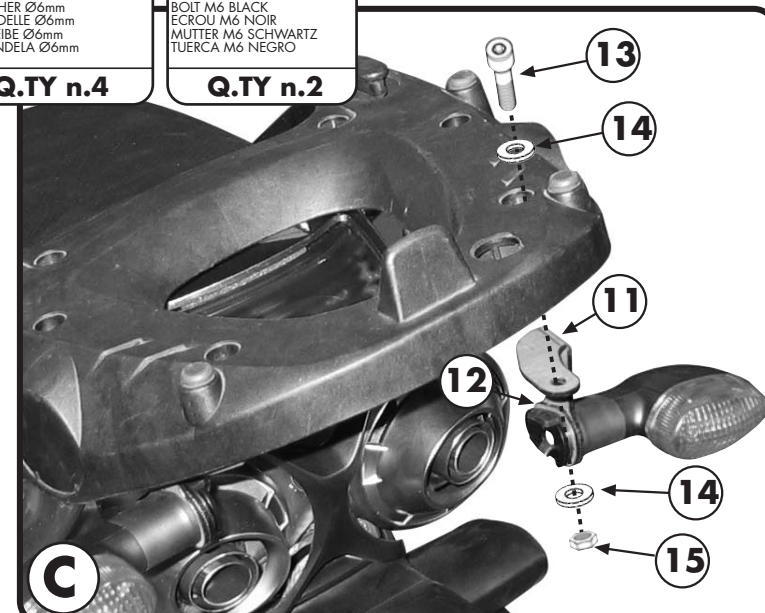
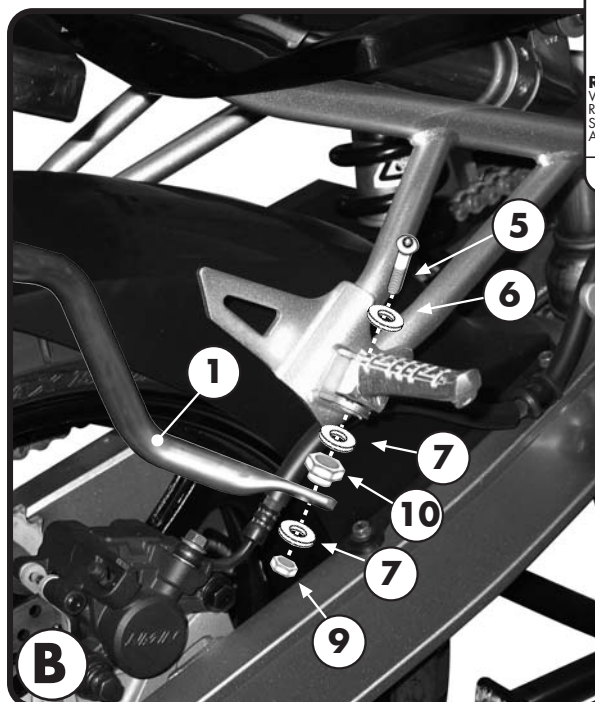
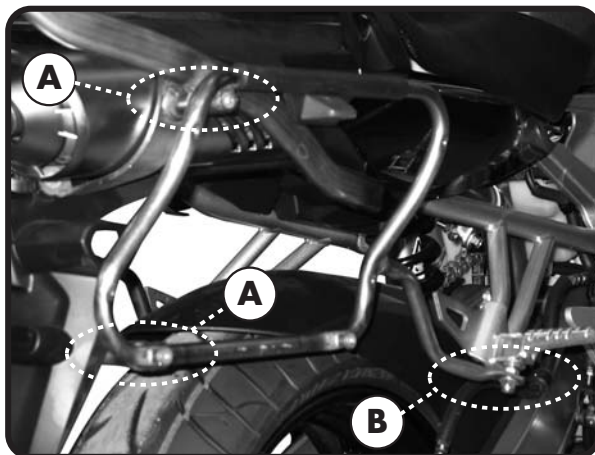
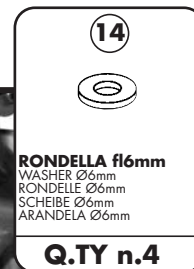
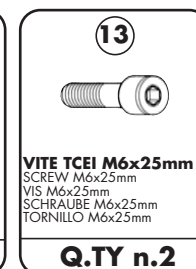
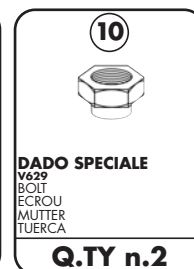
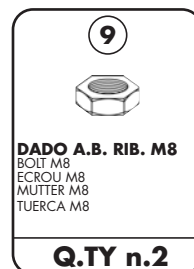
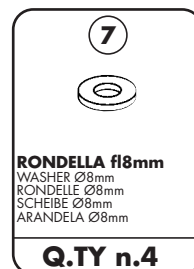
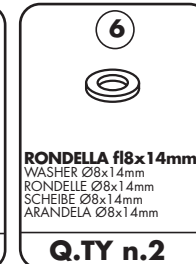
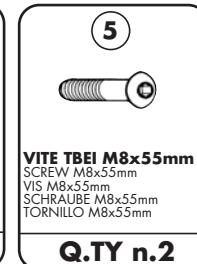


PORTAVALIGIE LATERALE SPECIFICO - SPECIFIC TUBULAR SIDE-CASE HOLDER
 PORTE-VALISES LAT RAUX SP CIFIQUE - SPEZIFISCHES STAHLROHR-SEITENTRAEGER
 PORTA MALETAS LATERALES ESPECCEFICO

YAMAHA FZ6-FZ6 Fazer

"04/06"

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS
 INSTRUCTIONS DE MONTAGE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE

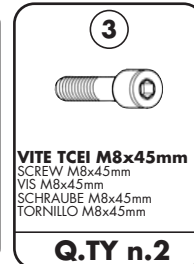

PORTAVALIGIE LATERALE SPECIFICO - SPECIFIC TUBULAR SIDE-CASE HOLDER
 PORTE-VALISES LAT RAUX SP CIFIQUE - SPEZIFISCHES STAHLROHR-SEITENTRAEGER
 PORTA MALETAS LATERALES ESPECCEFICO

YAMAHA FZ6-FZ6 Fazer

"04/06"

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS
 INSTRUCTIONS DE MONTAGE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE

I ISTRUZIONI DI MONTAGGIO

- POSIZIONARE IL SUPPORTO 1 COME INDICATO IN FIGURA "A" ED ESEGUIRE IL MONTAGGIO PROPOSTO.
- FISSARE IL SUPPORTO "1" ALLA PEDALINA COME INDICATO IN FIGURA "B".
- MONTARE IL SUPPORTO FRECCIA COME INDICATO IN FIGURA "C".

GB MOUNTING INSTRUCTIONS

1. PLACE THE SUPPORT N°1 AS SHOWN IN PICTURE A AND CARRY OUT THE MOUNTING PROCEDURE SUGGESTED;
2. FIX THE SUPPORT N°1 TO THE FOOTREST AS SHOWN IN PICTURE B;
3. MOUNT THE INDICATOR HOLDER AS SHOWN IN PICTURE C;

F INSTRUCTIONS DE MONTAGE

1. POSITIONNER LES SUPPORTS N°1 COMME INDIQUE EN PHOTO A ET PROCEDER AU MONTAGE ;
2. FIXER LES SUPPORTS N°1 AUX REPOSE-PIEDS COMME INDIQUE EN PHOTO B ;
3. MONTER LES SUPPORTS DE CLIGNOTANTS COMME INDIQUE EN PHOTO C ;

D BAUANLEITUNG

1. POSITIONIEREN SIE DIE HALTERUNG NR. 1 WIE IM BILD A BESCHRIEBEN UND FÜHREN SIE DIE MONTAGESCHRITTE DURCH.
2. BEFESTIGEN SIE DIE HALTERUNG NR. 1 AN DEN FUßRASTEN WIE IM BILD B BESCHRIEBEN;
3. MONTIEREN SIE DIE BLINKERHALTERUNG WIE IM BILD C BESCHRIEBEN.

ES

INSTRUCCIONES DE MONTAJE

1. POSICIONAR EL PORTAMALETAS LATERAL TUBULAR TAL Y COMO SE INDICA EN LA FIGURA "A" , SIGUIENDO LAS INSTRUCCIONES PRESENTADAS.
2. FIJAR EL SOPORTE AL PEDAL, TAL Y COMO SE INDICA EN LA FIGURA "B".
3. MONTARE EL SOPORTE TAL Y COMO SE INDICA EN LA FIGURA "C".