

Gepäckbrücke
Alurack

BMW R 1200 R
ab Baujahr 2006

Artikel-Nr.:
4005.016.211 schwarz

KRAUSER[®]
MOTORRADGEPÄCKSYSTEME ■ BIKE BAGS

Montage

Der Bausatz umfaßt die folgenden Teile:

Stück	Bestellnr.	Bezeichnung
1	799.997	Alu-Rack
1	799.904	Abdeckplatte für Rack
1	705.120	Adapterplatte
1	330.300	Schriftzug „KRAUSER“
2	151.302	Senkscheiben ø8,4 x ø25mm

Stück	Bestellnr.	Bezeichnung
2	151.102	Senkinbusschrauben M6x25
2	151.272	Senkinbusschrauben M6x60
4	150.763	Inbusschrauben M6 x 20
4	150.164	Viereck-Scheiben 20 x 20 x ø6,4

Nur in Verbindung mit der Original BMW-Gepäckbrücke montierbar !



Anzugsmomente des Motorradherstellers beachten!
Nach der Montage alle Verschraubungen auf festen Sitz kontrollieren!
Bitte beachten Sie unsere beigefügten Serviceinformationen.

Als weiteres Zubehör lieferbar:
Motorschutzbügel

Art.-Nr.: 3005.016.101/109 schwarz oder silber



Krauser GmbH
An der Steinmauer 6

D-66955 Pirmasens

Tel.: 06331 - 1453 - 250
Fax: 06331 - 1453 - 260
eMail: vertrieb@krauser.de
www.krauser.de

Wir fahren voraus.

Montage


Vorbereitung:

- Original Abdeckung der Brücke demontieren (entfällt).
- Originalbrücke abschrauben (entfällt)


Montage der Adapterplatte:

Über die nun freien Bohrungen die Adapterplatte mit den Senkinbuschrauben befestigen.

Vorne die Schrauben M6x25 mit Senkscheiben ø8,4 x ø25mm und hinten die Schrauben M6x60 verwenden.



1

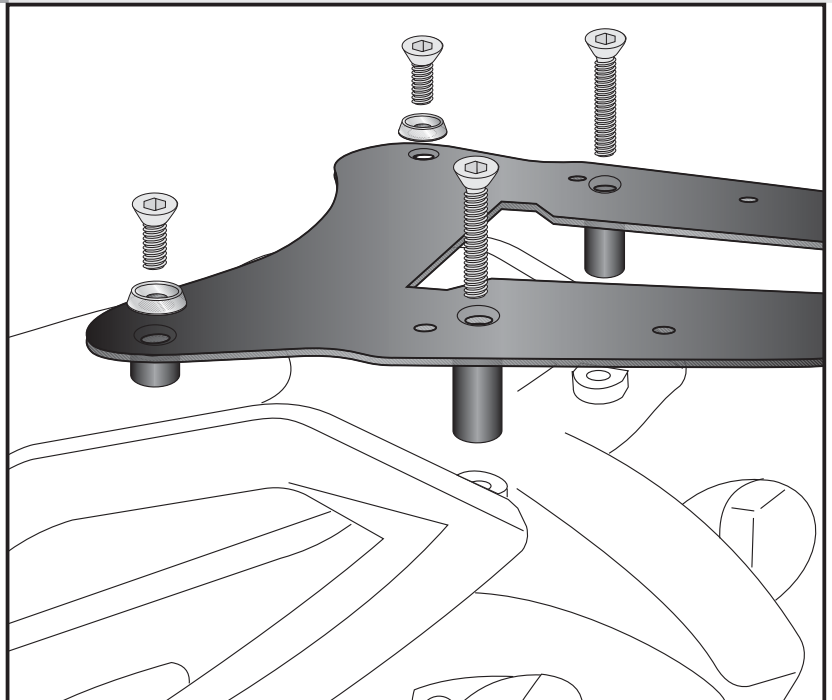



Montage des Alu-Rack:

Das Alu-Rack wird mit den Inbuschrauben M6 x 20 und Viereckscheiben 20 x 20 x ø6,4 in den vorhandenen Bohrungen in der Adapterplatte verschraubt.

Anschließend die Kunststoffabdeckung des Alu-Racks montieren.

HINWEIS:


Alurack so montieren, dass sich die Sitzbank noch aufklappen läßt.



4x

4x

2

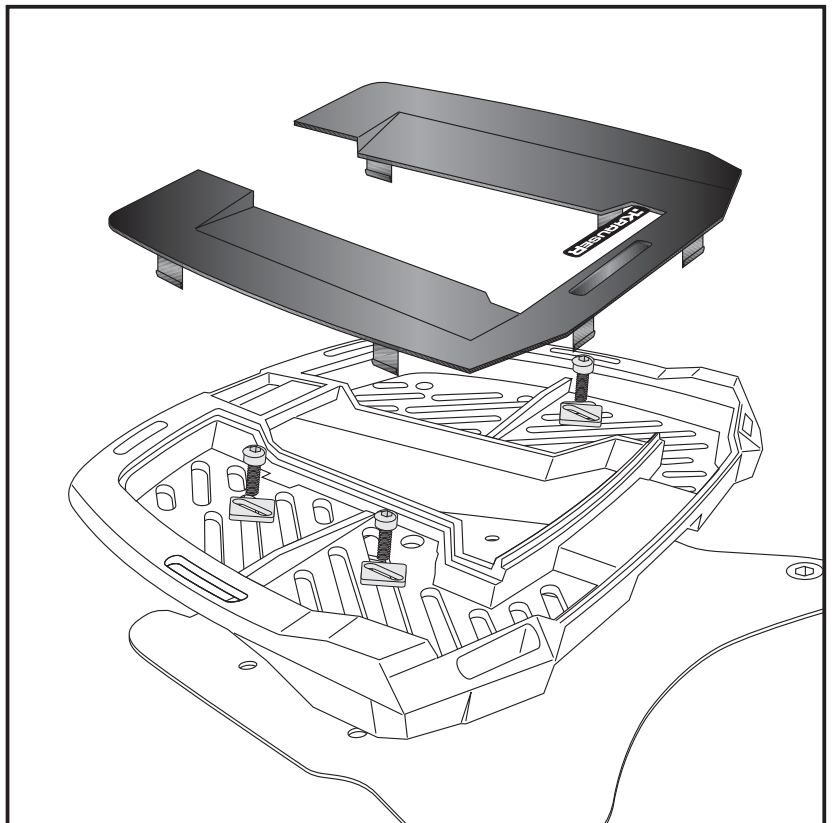

Rear carrier
Aluminium rack

BMW R 1200 R
from date of manufacture 2006

Item - No.:
4005.016.211 black

KRAUSER[®]
MOTORRADGEPÄCKSYSTEME ■ BIKE BAGS

Assembling instructions

The kit includes the following parts:

Quant	item no.	description
1	799.997	alu-rack
1	799.904	plastic cover for rack
1	330.300	emblem Krauser
1	705.120	adapter plate
2	151.302	countersunk washers ø8,4 x ø25mm

Quant	item no.	description
2	151.102	countersunk head allen screw M6x25
2	151.272	countersunk head allen screw M6x60
4	150.763	allen screw M6 x 20
4	150.164	special washer 20 x 20 x ø6,4

To fix the Hepco & Becker aluminium rack the original BMW-rear rack is necessary !



Control all screw connections after the assembling for tightness!
Please notice our enclosed service information.

Also available:

Engine guard

Item.-no.: 3005.016.101/109 black or silver



Krauser GmbH
An der Steinmauer 6
D-66955 Pirmasens

Tel.: +49 6331 - 1453 - 250
Fax: +49 6331 - 1453 - 260
eMail: vertrieb@krauser.de
www.krauser.de

Rear carrier
Aluminium rack

BMW R 1200 R
from date of manufacture 2006

Item - No.:
4005.016.211 black

KRAUSER[®]
MOTORRADGEPÄCKSYSTEME ■ BIKE BAGS

Assembling instructions

Preparing:



- dismantle original cover of the rack
 - dismantle original rear rack
- Both parts are obsolete.

Fastening of the adapter-plate:

Front: use countersunk head allen screws M6x25 with countersunk washers Ø8,4 x Ø25mm.

Rear: use countersunk head allen screws M6x60

1

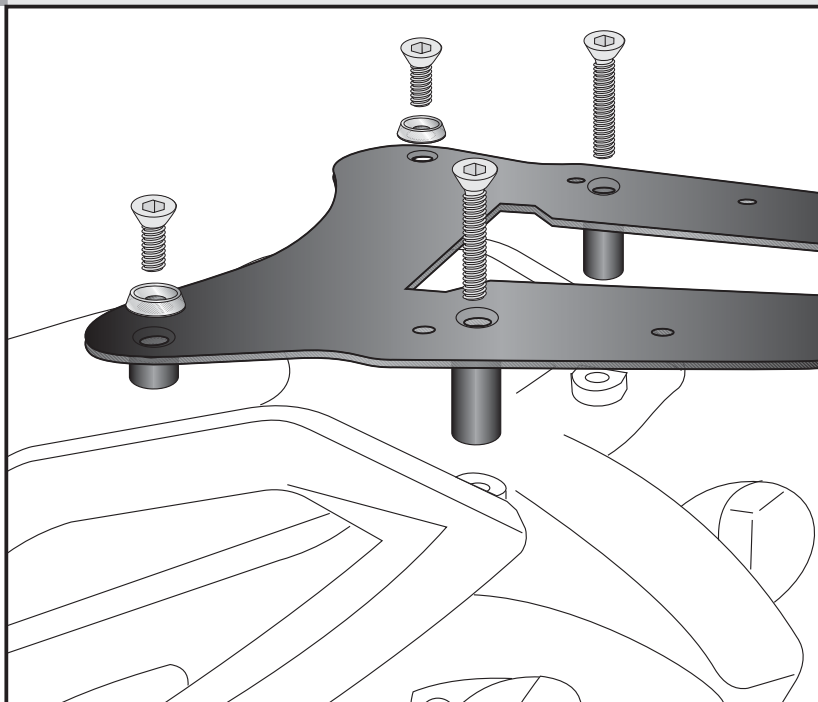

2x



2x

2x

Fastening of the alu-rack:

with allen screws M6 x 20 and special washers 20 x 20 x Ø6,4.



Choose position.

Control, if seat can be opened.


If not, change position of the rack.

Mount the plastic cover.

2

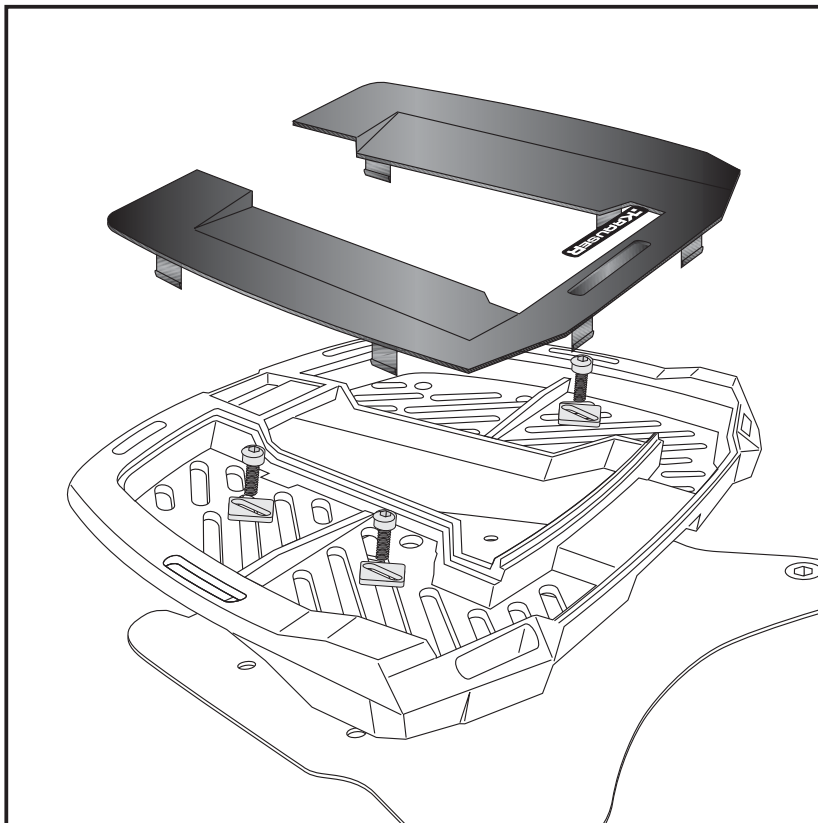

4x



4x