

C-Bow Softtaschenhalter

BMW S 1000 XR
ab Baujahr 2015

Artikel-Nr.:
630675 00 01 schwarz

Seitenkoffer
Topcases
Gepäckträger
Lock it System
Softbags
Aluminiumkoffer
Lederkoffer
Schutzbügel
Hauptständer
Chopper-Parts
Accessoires



Montage



Hinweise

Montagehinweis:

Die Voraussetzung für die Montage ist natürlich eine gewisse technische Erfahrung. Wenn Sie sich nicht sicher sind, wie man eine bestimmte Arbeit ausführt, sollten Sie diese Ihrer Fachwerkstatt überlassen.

Ziehen sie alle zugänglichen Schrauben zuerst nur locker an. Nachdem alles montiert ist, werden die Schrauben dann auf das entsprechende Anzugsmoment festgezogen. Dadurch wird sichergestellt, dass das Produkt spannungsfrei angebaut ist.

Anzugsmomente des Motorradherstellers beachten!

Nach der Montage alle Verschraubungen auf festen Sitz kontrollieren!

Bausatz

- | | | |
|---|-----------|-----------------------------|
| 2 | 700007063 | C-Bow schwarz |
| 1 | 700009064 | C-Bow Adapter vorne links |
| 1 | 700009065 | C-Bow Adapter vorne rechts |
| 1 | 700009066 | C-Bow Adapter hinten links |
| 1 | 700009067 | C-Bow Adapter hinten rechts |

1 700009068 **Schraubensatz:**

2x Inbusschrauben M8x40
2x Inbusschrauben M8x60
8x Sechskantschrauben M6x18
8x U-Scheiben Ø6,4

Werkzeuge

Inbusschlüssel 6
Gabel-Ringschlüssel 10



kombinierbar mit Alu- oder Easyrack



Montage der C-Bow Adapter hinten links + rechts:

Die C- Bow Adapter werden an den freien Gewindebohrungen unterhalb der Haltegriffe mit den Inbusschrauben M8x60 verschraubt.


1

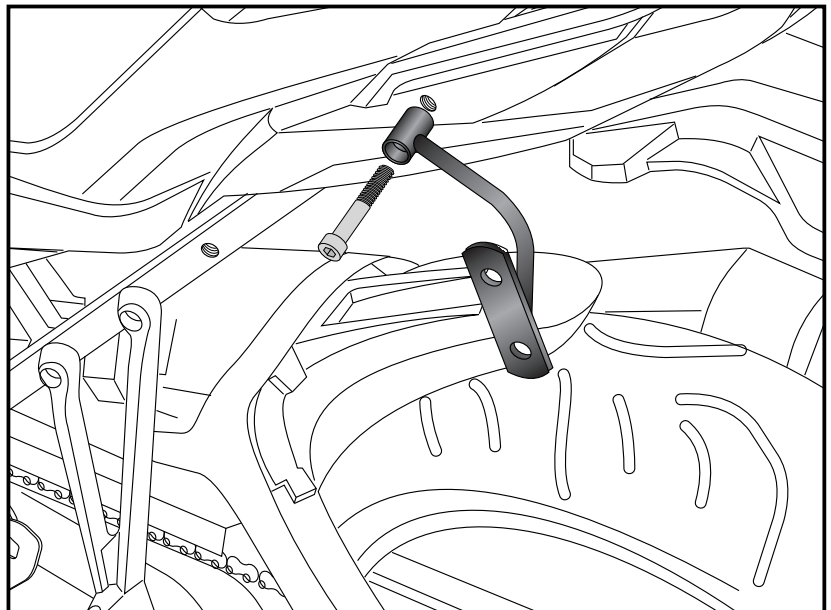


2x

**Montage der C-Bow Adapter vorne
links + rechts:**

Die C- Bow Adapter werden an den freien
Gewindebohrungen neben den Fuß-
rasten mit den Inbusschrauben M8x40
verschraubt.



2

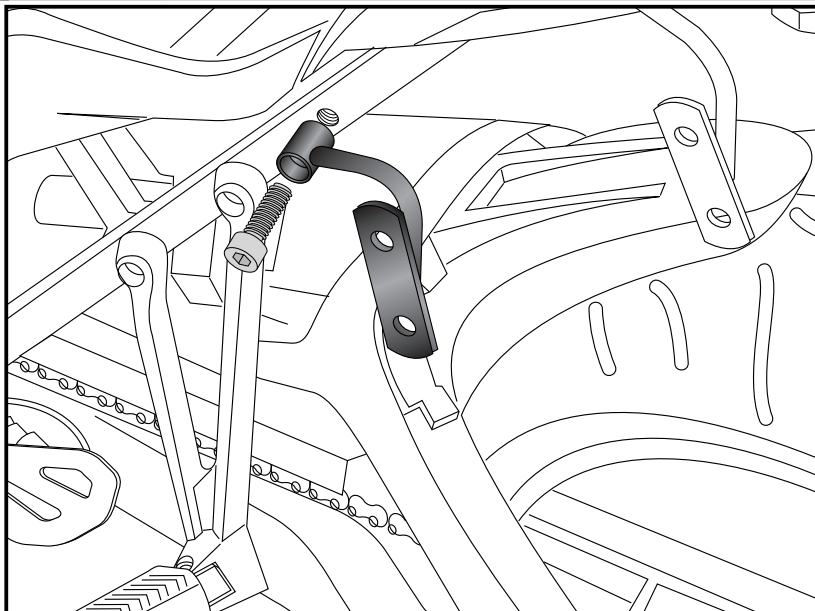

Montage der C-Bow links + rechts:


An den Adaptern.

Hierzu die Sechskantschrauben M6x18
und die U-Scheiben Ø6,4 verwenden.

Alle Teile korrekt ausrichten und die
Verschraubungen festziehen.



3

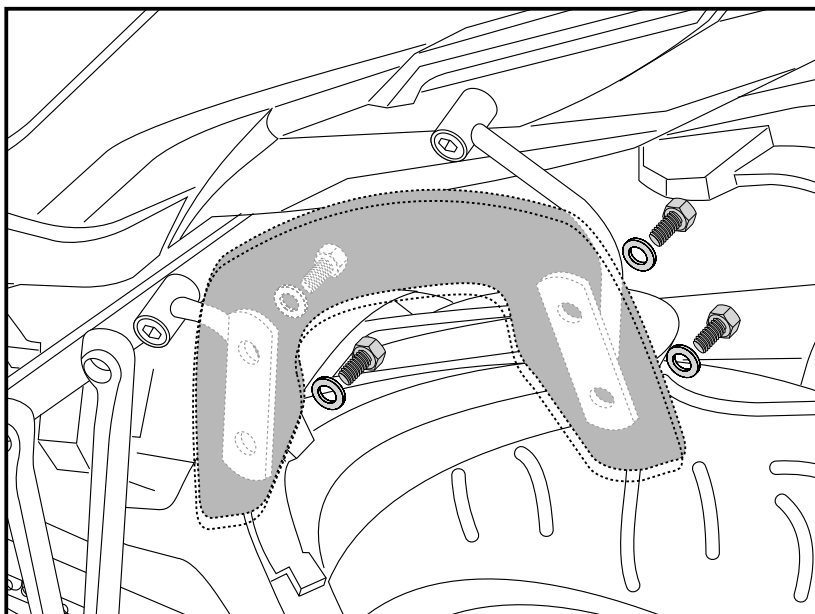

Als weiteres Zubehör lieferbar:

Alurack
Easyrack
Universal-Verbreiterung
Motorschutzbügel
Tankring

Art.-Nr.: 650675 01 01
Art.-Nr.: 661675 01 01
Art.-Nr.: 610053
Art.-Nr.: 501675 01 01
Art.-Nr.: 506003-6

Mehr Zubehör auf unsere Homepage.



Hepco & Becker GmbH
An der Steinmauer 6
D-66955 Pirmasens

Tel.: 06331 - 1453 - 100
Fax: 06331 - 1453 - 120
eMail: vertrieb@hepco-becker.de
www.hepco-becker.de

C-Bow Softbag holder

BMW S 1000 XR
from date of manufacture 2015

item.-no.:
630675 00 01 black

Side cases
Top cases
luggage frames
Lock it system
Softbags
Aluminium luggage
Leather luggage
Protection bars
Center stands
Chopper parts
Accessories



Assembling instructions



Note

Installation note:

Of course, the assembly requires a certain technical experience. If you are not sure how to execute a determined action, you should ask your local distributor to do it.

First, tighten all screws only loosely. After mounting all parts, the screws should be tightened to the torque specified. This guarantees, that the product is mounted without tension.

Observe the tightening torques of the motorcycle manufacturer!
Control all screw connections after the assembling for tightness!

Kit

- | | | |
|---|-----------|---------------------------|
| 2 | 700007063 | C-Bow black |
| 1 | 700009064 | C-Bow adapter front left |
| 1 | 700009065 | C-Bow adapter front right |
| 1 | 700009066 | C-Bow adapter rear right |
| 1 | 700009067 | C-Bow adapter rear left |

- 1 700009068 Screw kit:

2x allen screw M8x40
2x allen screw M8x60
8x hexagon bolt M6x18
8x washer Ø6,4

Tools required


Allen key 6

Wrench 10

combinable with Alu- or Easyrack




Fastening of the C-Bow adapter rear left + right:
at the free threads below the handles.
Use allen screws M8x60.



2x



1

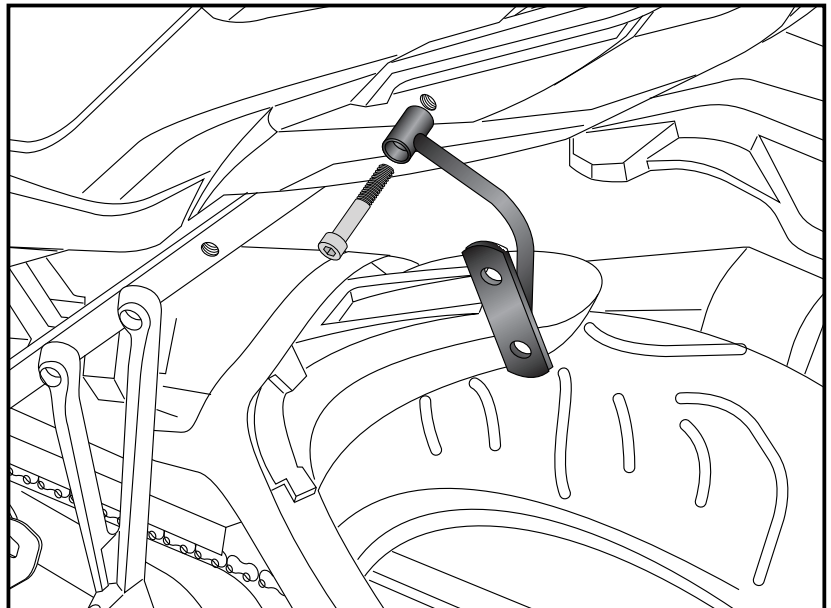

Fastening of the C-Bow adapter front
left + right:

at the free threads next to the footrest
holders. Use allen screws M8x40.

2

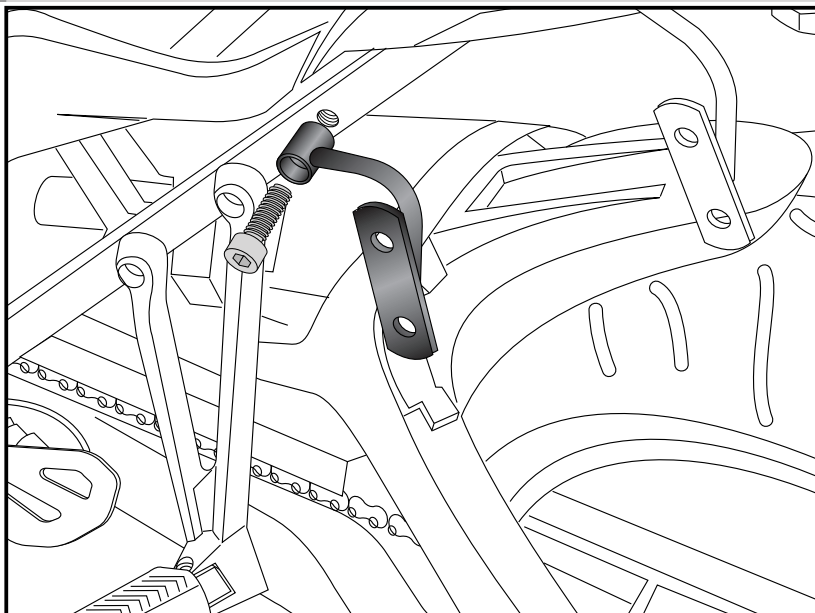


2x

Fastening of the C-Bows:
with hexagon bolts M6 x 18 and
washers ø6,4 to the adapters.

After mounting all parts, the screws
should be tightened to the torque
specified.

3

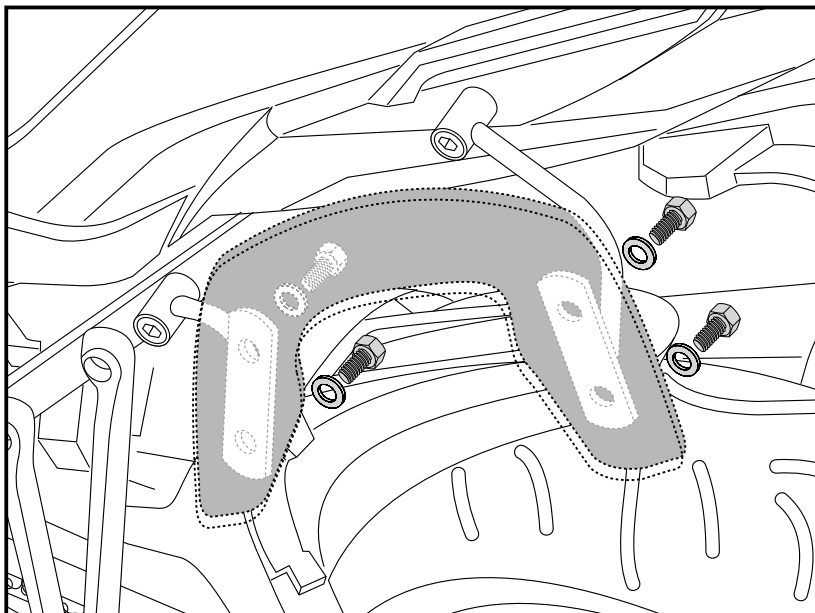

8x

8x

Also available:

Alurack
Easyrack
Enlargement
Engine guard
Tankring

650.675 01 01
661.675 01 01
610053
501675 01 01
506003-6

More accessories: see our homepage.



Hepco & Becker GmbH
An der Steinmauer 6
D-66955 Pirmasens
Germany

Tel.: +49 6331 - 1453 - 100
Fax: +49 6331 - 1453 - 120
eMail: vertrieb@hepco-becker.de
www.hepco-becker.de