

Sturzpad-Kit YAMAHA FZ1 '06 – / FZ6 Fazer '07 –
Frame Slider Kit YAMAHA FZ1 '06 – / FZ6 Fazer '07 –

Montagehinweise

Alle vom Motorrad gelösten Schrauben sind gemäß Herstellerangaben wieder zu montieren, oder mit von SW-MOTECH gelieferten Schrauben zu ersetzen. Falls nicht anderweitig definiert, diese Schrauben nach Tabelle anziehen.

M6	9,6 Nm
M10	46 Nm

Gegebenenfalls Schrauben mit flüssiger Schraubensicherung einkleben.

Prüfen Sie nach 50 km alle Verbindungen auf festen Sitz.

SW-MOTECH GmbH & Co. KG
Ernteweg 8/10
35282 Rauschenberg
Germany

Tel. +49 (0) 64 25/8 16 8-00
Fax +49 (0) 64 25/8 16 8-10

info@sw-motech.com
www.sw-motech.com

Mounting Instructions

SW-MOTECH products should be installed by a qualified, experienced motorcycle technician. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer. SW Motech takes no responsibility for damages caused by improper installation.


All screws, bolts and nuts, including all replacement hardware provided by SW-MOTECH, should be tightened to the torque specified in the OEM maintenance manual for your motorcycle. If no torque specifications are provided in the OEM maintenance manual, the following torques may be used:

M6	9,6 Nm
M10	46 Nm

All screws, bolts and nuts should be checked after driving the first 50 km to ensure that all are tightened to the proper torque.


Medium strength liquid thread-locker (i.e., "Loctite") should be used to secure all screws, bolts and nuts.

1 Sturzpad
Frame Slider




STP.00.590.001 01
Anzahl/ Pcs. 2

2 Logoplatte
Logo Plate



LOG.00.000.001 01
Anzahl/ Pcs. 2


3 Senkkopfschraube
Countersunk Screw



M3 x 12 DIN 7991
Anzahl/ Pcs. 4


STP.00.590.10000/B

4 Adapterplatte
Adapter Plate



STP.00.590.002 00
Anzahl/ Pcs. 2

5 Basisplatte
Mounting Plate




STP.00.590.003 01
Anzahl/ Pcs. 2

6 Innensechskant-
schraube
Hexagon Socket Screw




FEINGEWINDE
M10 x 1,25 x 70 DIN 912
Anzahl/ Pcs. 2

7 Distanzbuchse
Spacer



Da:20 Di:10,5 h:20
Anzahl/ Pcs. 2

8 Zylinderstift
Positioning Pin





HOS.00.050.60.0007
Anzahl/ Pcs. 1

9 Innensechskant-
schraube
Hexagon Socket Screw



M6 x 40 DIN 912
Anzahl/ Pcs. 4

STP.06.590.80000/B

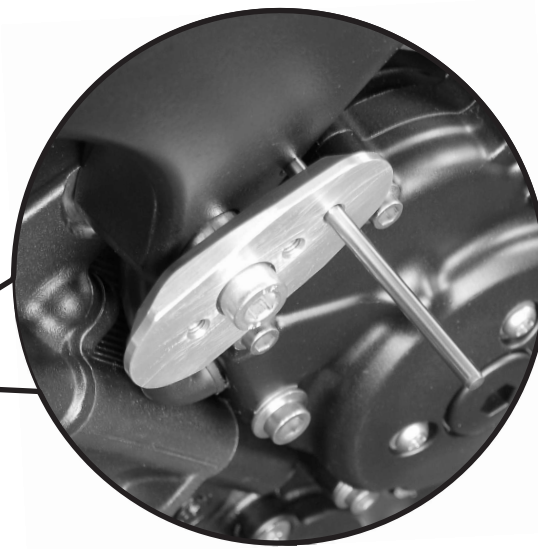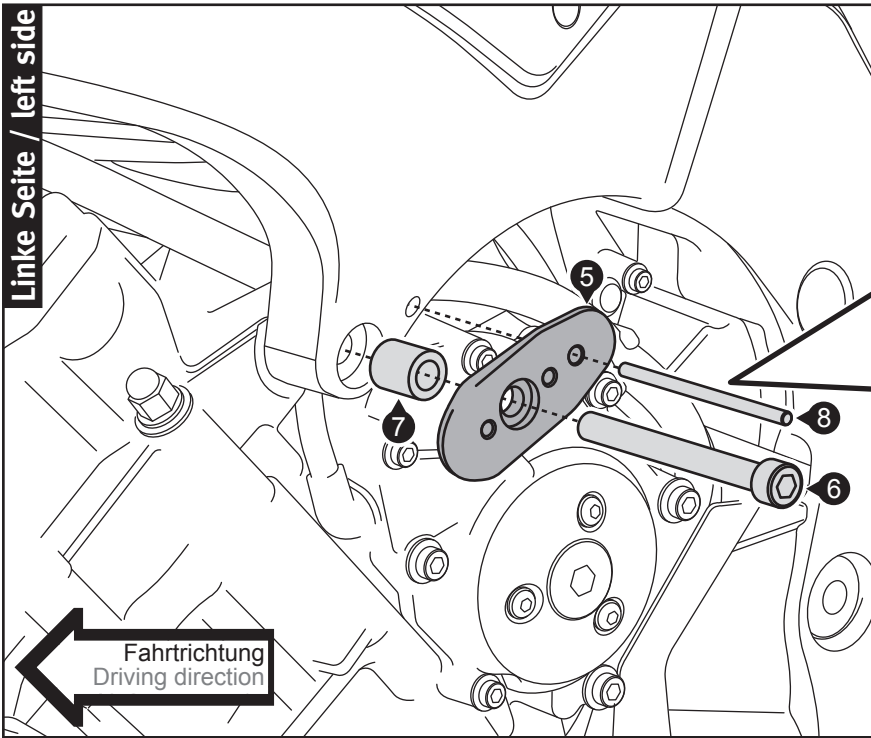

INFORMATION

Achtung: Benutzen Sie den Zylinderstift (8) zur seitensynchronen Arretierung der Basisplatten (5). Befestigen Sie die Basisplatte (5) zunächst auf der linken Seite, wie in der Zeichnung dargestellt. Ziehen Sie die Schraube (6) nur locker an. Führen Sie den Zylinderstift (8) durch die Arretierungsöffnung der Basisplatte (5) (siehe Foto). Entfernen Sie nach dem Arretieren der Basisplatte (5) den Zylinderstift (8) und ziehen Sie Schraube (6) an. Achten Sie dabei auf das vom Hersteller vorgeschriebene Anzugsmoment. Führen Sie nun die Montageschritte auch auf der rechten Seite des Fahrzeugs durch.

Attention: Use the positioning pin (8) to align the base plate (5). Attach the base plate (5) first on the left side, as shown in the drawing. Do not tighten the screw (6). Insert the positioning pin (8) through the base plate (5) (as shown in the picture). Remove the positioning pin (8) after adjustment of the base plate (5) and tighten screw (6). Pay attention to the manufacturer's specified torque. Follow the installation steps on the right side of the vehicle.

