

# C-Bow Soft bag holder

MOTO GUZZI Griso  
850/1100/1200 8V

Item-no.:  
**630537** black



## Assembling instructions

The kit includes the following parts:

Quant	item no.	description
2	700007063	C-Bow black
1	700007163	C-Bow adapter front left
1	700007164	C-Bow adapter front right
1	700007165	C-Bow adapter rear left
1	700007166	C-Bow adapter rear right
4	150.786	allen screw M8x40
2	151.116	spacer Ø18xØ9x5 mm
8	150.915	hexagon bolt M6x16
8	150.809	washer Ø6,4
4	150.810	washer Ø8,4
4	150.999	special washer Ø8,4

Preparing:

Unmount the original luggage holders, they are obsolete.  
The rear blinker remain in their original position.

Tip:

Fit all parts and screw on not too strong.  
After mounting all parts, the screws should be tightened  
to the torque specified.  
This guarantees, that the kit is mounted without tension.



Control all screw connections after the assembling for tightness!  
Please notice our enclosed service information.



Hepco & Becker GmbH  
An der Steinmauer 6  
D-66955 Pirmasens  
Tel.: +49 6331 - 1453 - 100  
Fax: +49 6331 - 1453 - 120  
eMail: [vertrieb@hepco-becker.de](mailto:vertrieb@hepco-becker.de)  
[www.hepco-becker.de](http://www.hepco-becker.de)

# C-Bow Soft bag holder


**MOTO GUZZI Griso**  
850/1100/1200 8V

Item-no.:  
**630537** black




## Assembling instructions

**Fastening of the adapters front:** ①  
at the original fixing point of the luggage holders with allen screw M8x40 and washer Ø8,4.  
Sandwich special washers Ø8,4 between adapter and frame.



**Fastening of the adapters rear:** ②  
at the original fixing point of the luggage holders with allen screw M8x40 and washer Ø8,4.  
Sandwich special washers Ø8,4 and aluspacer Ø18xØ9x5mm between adapter and frame.  
Notice: when mounting C-Bow together with a rear rack, special washers ③ and aluspacer are obsolete.

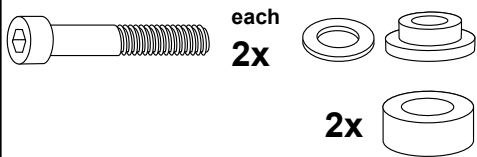

**Fastening of the C-Bow:**  
with hexagon bolts M6 x 16 and washers Ø6,4.

