

KAWASAKI Vulcan S ab Baujahr 2015

Solorack mit Rückenlehne
Artikel-Nr.: 6112523 00 01 schwarz

Solorack ohne Rückenlehne
Artikel-Nr.: 6002523 00 01 schwarz

Seitenkoffer
Topcases
Gepäckträger
Lock it System
Softbags
Aluminiumkoffer
Lederkoffer
Schutzbügel
Hauptständer
Chopper-Parts
Accessoires



Montage

Bausatz

1x	700008933	Solorack mit Rückenlehne
oder		
1x	700008934	Solorack ohne Rückenlehne

Werkzeuge

Inbusschlüssel 6

Kombinierbar mit C-Bow
Satteltaschenhalter 6302524



Hinweise

Montagehinweis:

Die Voraussetzung für die Montage ist natürlich eine gewisse technische Erfahrung. Wenn Sie sich nicht sicher sind, wie man eine bestimmte Arbeit ausführt, sollten Sie diese Ihrer Fachwerkstatt überlassen.

Ziehen sie alle zugänglichen Schrauben zuerst nur locker an. Nachdem alles montiert ist, werden die Schrauben dann auf das entsprechende Anzugsmoment festgezogen. Dadurch wird sichergestellt, dass das Produkt spannungsfrei angebaut ist.

Anzugsmomente des Motorradherstellers beachten!
Nach der Montage alle Verschraubungen auf festen Sitz kontrollieren!
Bitte beachten Sie unsere beigefügten Serviceinformationen.

KAWASAKI Vulcan S ab Baujahr 2015

Solorack mit Rückenlehne
Artikel-Nr.: 6112523 00 01 schwarz

Solorack ohne Rückenlehne
Artikel-Nr.: 6002523 00 01 schwarz



Montage

Vorbereitung:

Soziussitzbank abnehmen.
Den Halter des Sitzes demontieren, er entfällt.

Montage des Soloracks:

an den Originalverschraubungspunkten mit den
Originalschrauben.

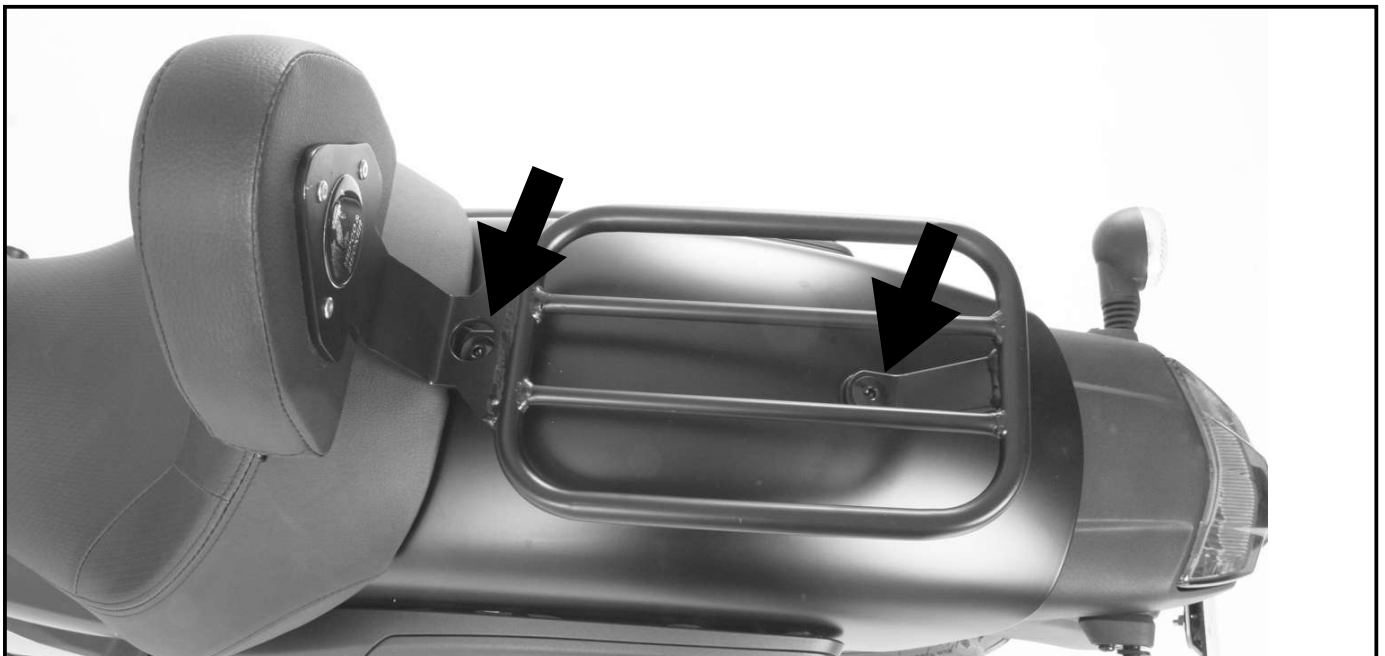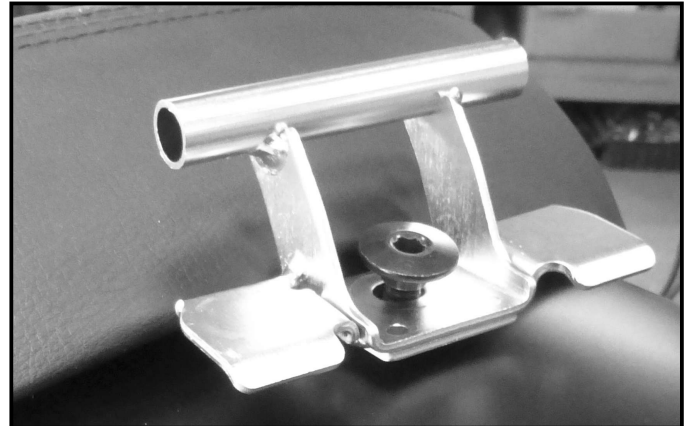

Als weiteres Zubehör lieferbar:
Motorschutzbügel
C-Bow Halter für Softtaschen

Art.-Nr.: 5012524 00 01 schwarz
Art.-Nr.: 6302524 00 01 schwarz

Mehr Zubehör auf unsere Homepage.



Hepco & Becker GmbH
An der Steinmauer 6

D-66955 Pirmasens

Tel.: 06331 - 1453 - 100

Fax: 06331 - 1453 - 120

eMail: vertrieb@hepco-becker.de

www.hepco-becker.de



KAWASAKI Vulcan S
from date of manufacture 2015

Solorack with back rest
item-no.: 6112523 00 01 black

Solorack without back rest
item-no.: 6002523 00 01 black

Side cases
Top cases
luggage frames
Lock it system
Softbags
Aluminium luggage
Leather luggage
Protection bars
Center stands
Chopper parts
Accessories



Assembling instructions

Kit

1x	700008933	Solorack with back rest
or		
1x	700008934	Solorack without back rest

Tools required

Allen key 6

combinable with C-Bow
leather bag holder 6302524



Note

Installation note:

Of course, the assembly requires a certain technical experience. If you are not sure how to execute a determined action, you should ask your local distributor to do it.

First, tighten all screws only loosely. After mounting all parts, the screws should be tightened to the torque specified. This guarantees, that the product is mounted without tension.

Observe the tightening torques of the motorcycle manufacturer!
Control all screw connections after the assembling for tightness!
Please notice our enclosed service information.

KAWASAKI Vulcan S

from date of manufacture 2015

Solorack with back rest
item-no.: 6112523 00 01 black

Solorack without back rest
item-no.: 6002523 00 01 black

- Side cases
- Top cases
- luggage frames
- Lock it system
- Softbags
- Aluminium luggage
- Leather luggage
- Protection bars
- Center stands
- Chopper parts
- Accessories


Assembling instructions

Preparing:

Dismantle passengers seat.
Dismantle holder shown in the picture.
Holder is obsolete.

Fastening of the Solorack:

at the original bolting points with original screws

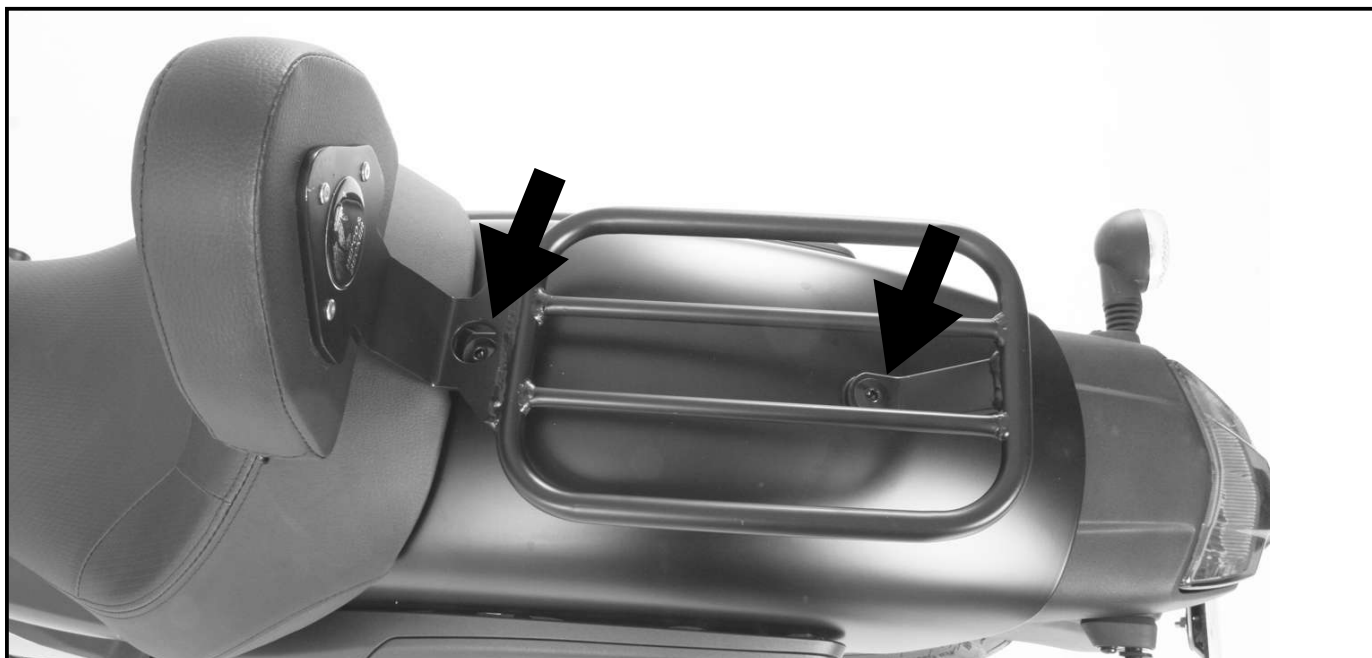

Also available:

Engine guard

C-Bow Holder for softbags

Item-No. 5012524 00 01 black

Item-No. 6302524 00 01 black

More accessories: see our homepage.



Hepco & Becker GmbH
An der Steinmauer 6
D-66955 Pirmasens
Germany

Tel.: +49 6331 - 1453 - 100

Fax: +49 6331 - 1453 - 120

eMail: vertrieb@hepco-becker.de

www.hepco-becker.de